

Tucker's **Rental**

Traditional Canopy Setup Instructions



For any questions call the office:

(810) 686-9490


Monday – Friday 8am – 5pm

Saturday 8am – 12pm


ASSEMBLY

[20'x30' Shown]

1. Inspect the site and make sure the area is level, free of utilities and overhangs. Unload poles and tent bundles.
2. Lay the canopy out, on a ground cloth, with the top side up. Stretch and square the fabric to remove slack. Pull the guy ropes out from the canopy. See fig.1.
3. Drive the stakes 4' out and at a slight angle away from the canopy. Stake the corners first, using two stakes placed at 90° from each corner. See fig.1. Continue staking until all guy ropes are at 4'. Be sure to leave enough slack in the guy ropes to raise the poles.
4. Using aluminum poles, assemble them secure.
5. Install the side poles from the underside of the canopy. Insert pole pins up through both the grommet and D-ring. See fig.3. Stand the poles up at a 60° angle with their base toward the center of the tent. Set the corner poles first, then the side poles. See fig.4.

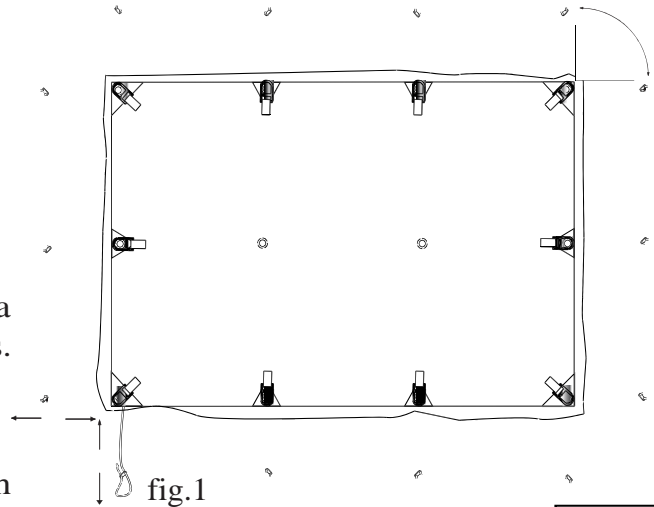

Top View

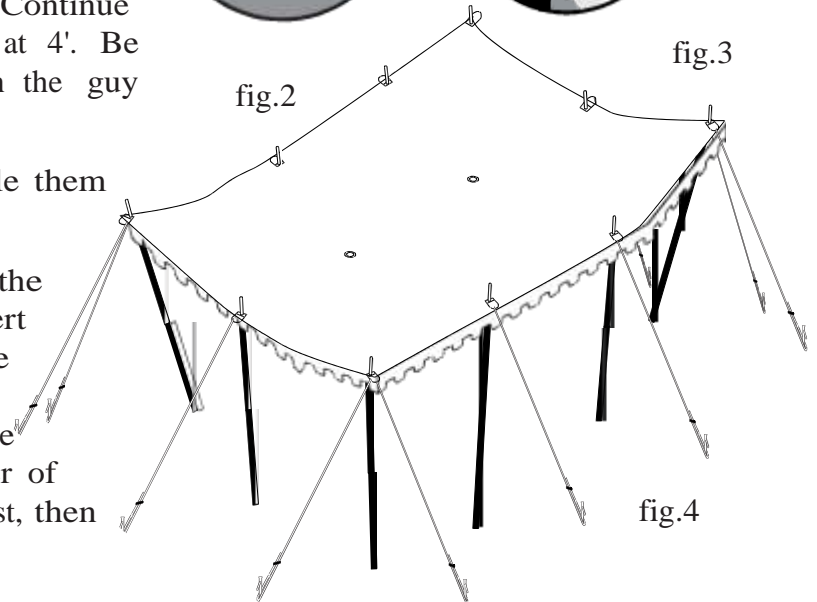

6. With the perimeter poles set, walk under the tent and insert center pole pin into the grommet at the top of the canopy. With this pin in place, lift and push the pin end skyward and the center pole base toward center of tent to raise the pole and canopy.

7. If your tent has multiple center poles, the first pole base should be angled at 45° to center. Raise the remaining center poles. When you have reached the 45° angles. Return to the first center pole and adjust to almost vertical. Adjust the other poles to almost vertical until all center poles are raised and adjusted.

8. With all center poles almost vertical, bring them into line. Have someone stand at one end of the tent. Align each center pole as directed by that person. Then align each center pole from the sides of the tent. See fig.5.



9. If the top of the center pole appears to be leaning toward one end:

- Tighten guy ropes and straighten side poles, at the end opposite the lean, to pull the center pole back to true.

Then straighten and adjust the guy ropes at the other end. Be careful, do not pull the center pole out of alignment.

- When center poles appear vertical, adjust opposing end side poles simultaneously to avoid drawing the entire tent toward one side or the other. After end side poles are adjusted and guy ropes are secured, repeat down the length of the tent. Again, avoid pulling or drawing entire tent to one side or the other.

- Secure the center pole. Tie a jump rope around the center pole. See fig. 6.

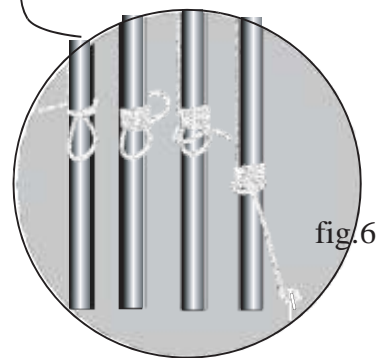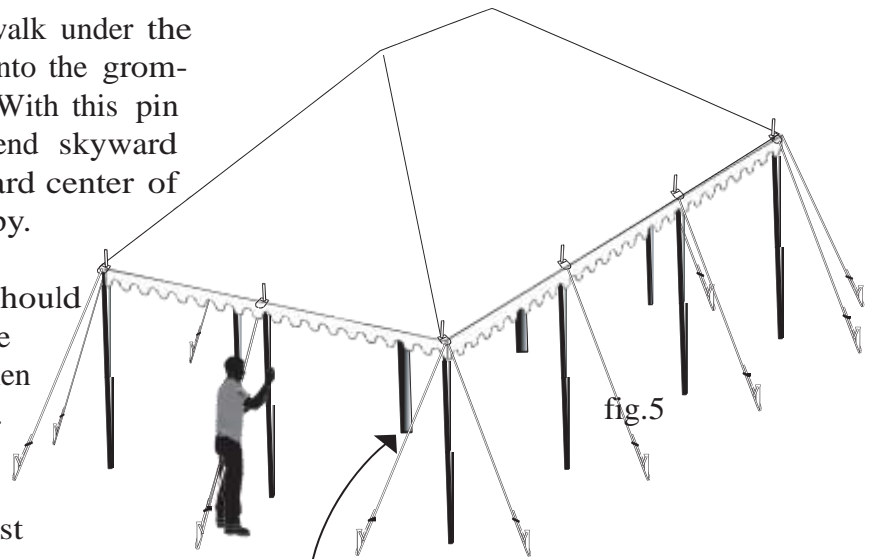


8. If using sidewalls, clip the sidewalls to the valance rope. Sidewalls overlap approximately 2'. Buckle the ends to insure complete enclosure.

NOTE:

Severe weather can damage tents. If severe weather is expected, take down the tent and store in a safe area.


20' X 20'

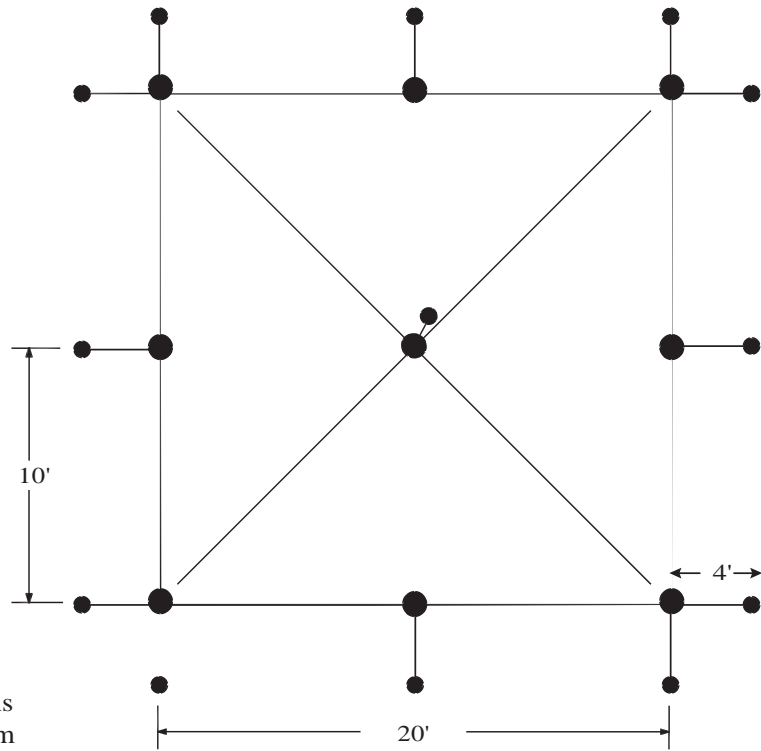


Note: Additional stakes will be necessary in soft soil conditions or whenever stakes pull up from the ground.

PLAN W/STAKES

PARTS LIST	
CANOPY TOP	1
STEEL STAKES	12
POLES (7ft long)	9
POLE EXTENDER (makes center pole)	1

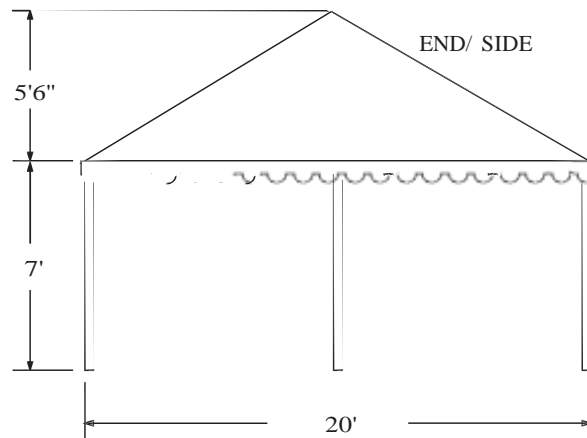



20' X 30'

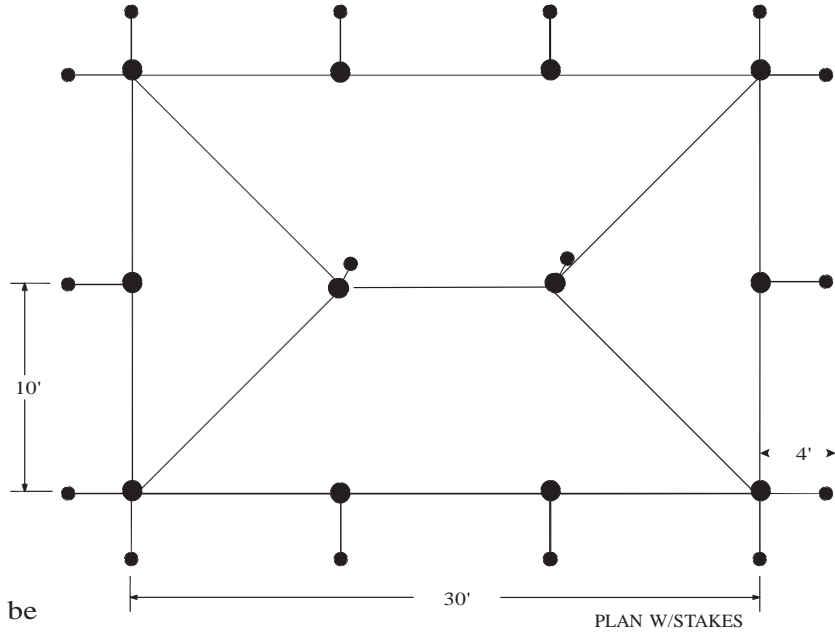


Note: Additional stakes will be necessary in soft soil conditions or whenever stakes pull up from the ground.

PARTS LIST

CANOPY TOP	1
STEEL STAKES	14
POLES (7ft long)	12
POLE EXTENDER (makes center pole)	2

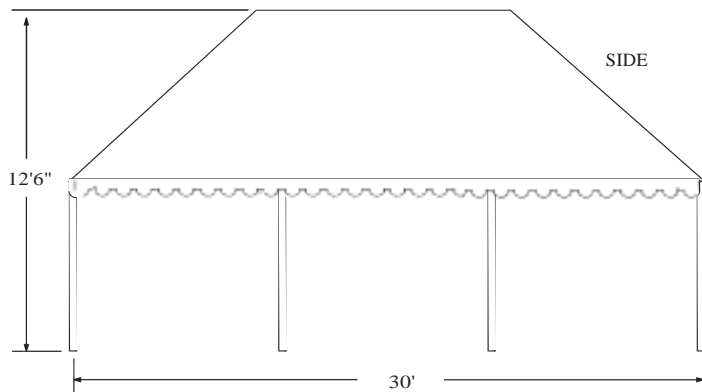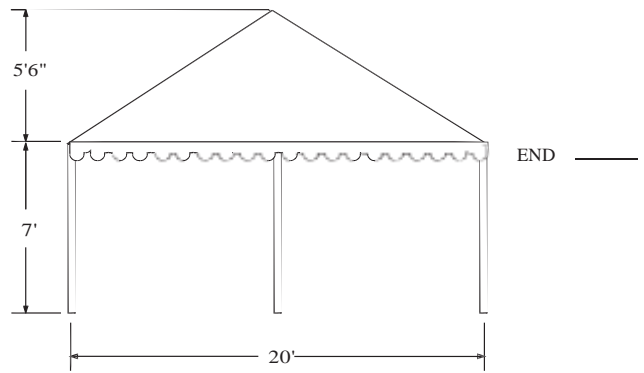

20' X 40'

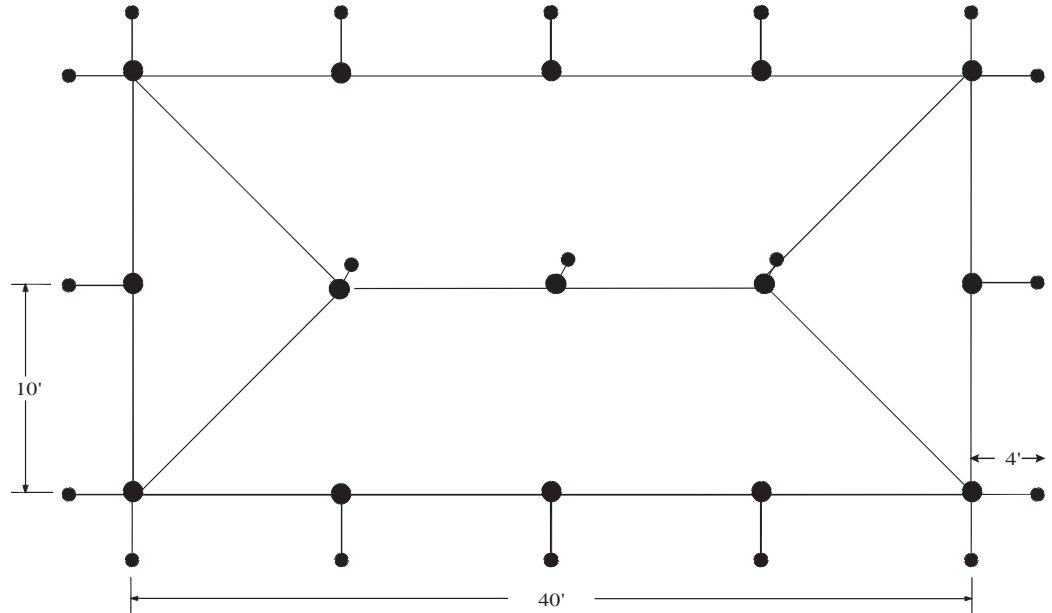

PLAN W/STAKES

Note: Additional stakes will be necessary in soft soil conditions or whenever stakes pull up from the ground.

PARTS LIST	
CANOPY TOP	1
STEEL STAKES	16
POLES (7ft long)	15
POLE EXTENDER (makes center pole)	3

